



- A- REFER TO DRAWING # 9938-378-Q01 TO INSTALL STANDARD
- SUPPLIED WALL MOUNTING PLATE (1).

 B-ROUGH-IN WASTE OUTLETS (2) AT DIMENSIONS SHOWN FOR 1-1/4" OUTER DIAMETER PLAIN END P-TRAPS (3).
- C- ROUGH-IN WATER SUPPLIES (4) AT DIMENSIONS SHOWN FOR THE 1/4" NOMINAL (3/8" O.D.) x 4" LONG COPPER TUBES CONNECTED TO IN-LINE STRAINERS (5) PROVIDED. STOPS RECOMMENDED ON SUPPLIES TO BE SUPPLIED BY OTHERS.
- D- CAREFULLY REMOVE FIXTURES (6) AND COMPONENTS FROM THE PACKAGING PREVENTING SCRATCHING AND DAMAGE.
- E- REMOVE SCREWS (7). REMOVE FOUNTAIN TOPS (8) LIFTING AT THE FRONT & PULLING FORWARD. DISCONNECT TUBING (9) FROM BUBBLERS BY UNSCREWING FERRULE NUTS (10) AND SET TOPS (8) ASIDE WHERE THEY WILL NOT GET DAMAGED.
- F- SLIDE SPACERS, BACK PLATE AND UNITS OVER STUDS FROM MOUNTING PLATE & SECURE WITH NUTS AND WASHERS (11).

- G- ASSEMBLE P-TRAPS (3) TO DRAIN ADAPTERS (12). ASSEMBLE TO UNITS WITH PHILLIPS SCREWS (13). MAKE-UP 1-1/4" O.D. WASTE CONNECTIONS.
- H- FLUSH WATER SUPPLIES (4) BY OTHERS OF ALL DEBRIS PRIOR TO CONNECTING TO FIXTURE.
- I— CONNECT WATER SUPPLIES (4) BY OTHERS TO 1/4" NOMINAL COPPER TUBE INLETS. STOPS ON SUPPLIES RECOMMENDED.
- J- ATTACH TUBING (9) TO BUBBLERS WITH FERRULE NUTS (10) TEST OPERATION OF BUBBLERS BY DEPRESSING BUTTONS (14). REFERENCE DRAWING # 9938-014-001 TO ADJUST FLOW RATE AS REQUIRED. CHECK ALL CONNECTIONS AND WASTE PIPING FOR LEAKS. CORRECT IF PRESENT.
- K-SET GASKETS (5) ON DRAIN ADAPTERS (2). RE-INSTALL TOPS (8) BY ENGAGING THE BACK CLIP AND SECURING WITH SCREWS (7).



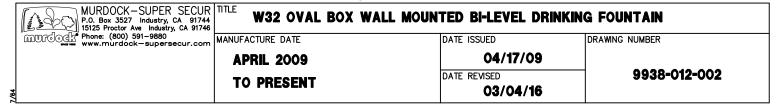

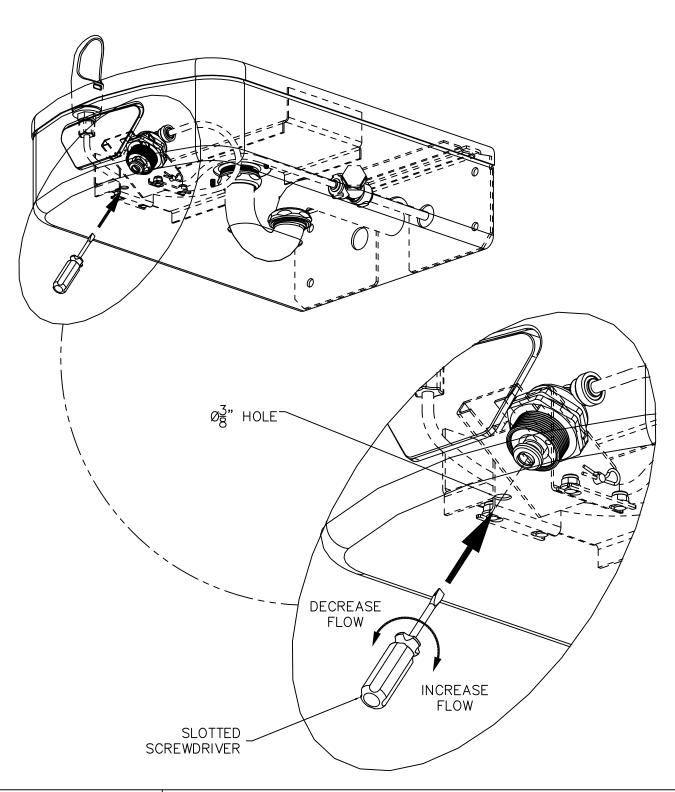


MURDOCK – SUPER SECUR P.O. Box 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746	18 GAGE OVAL BOX DRINKING FOUNTAIN FLOW RATE ADJUSTMENT				
Phone: (800) 591-9880 www.murdock-supersecur.com	MANUFACTURE DATE	DATE ISSUED	DRAWING NUMBER		
·	JANUARY 2006	09/27/05			
4	TO PRESENT	DATE REVISED 03/03/16	9938-014-001		



ROUGH-IN FOR 3/8" OD PUSH-IN SUPPLY INLET, STRAIGHT STOP RECOMMENDED. *1/4" NCT x 2' LONG TUBE STUB OUT PROVIDED.


ROUGH-IN FOR 1-1/4" OD P-TRAP WASTE

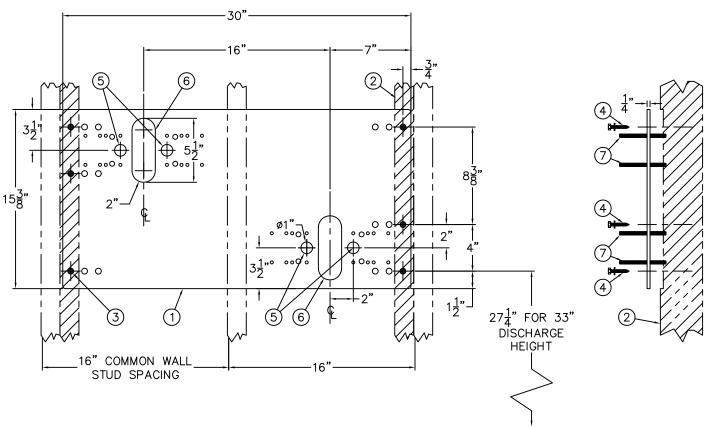

INSTALLATION INSTRUCTIONS:


NOTE: BI-LEVEL INSTALLATION SHOWN, OPTIONAL RBL REVERSE BI-LEVEL INSTALLATION OPPOSITE.

- A-PLATE (1) INTENDED TO BE RECESSED FLUSH WITH SUPPORT FRAMING (2) PROVIDED BY INSTALLER. FRAME & BLOCK OUT SUPPORT USING DIMENSIONS SHOWN. FRAME SHOULD SUPPORT 300 LBS MINIMUM.
- B-MOUNTING PLATE (1) IS 1/4" THICK AND INCLUDES 18, 1/2" DIAMETER PUNCHING FOR ANCHORING HARDWARE BY OTHERS.
- C-STRIKE A LEVEL HORIZONTAL CHALK_LINE TO LOCATE BOTTOM MOUNTING HOLES (3). REFERENCE DISCHARGE HEIGHT REQUIREMENTS FOR YOUR MODEL AND FACILITY TO DETERMINE CORRECT HEIGHT AT FINISHED FLOOR (AFF).
- D-AFTER POSITIONING PLATE CORRECTLY, FIX PLATE TO WALL USING APPROPRIATE, INSTALLER PROVIDED ANCHORING HARDWARE (4).
- E-MAKE UP APPROPRIATE SUPPLY (5) AND WASTE (6) ROUGHS THROUGH MOUNTING PLATE OPENINGS. A STRAIGHT SUPPLY STOP IS RECOMMENDED.
- F-REFER TO FIXTURE INSTALLATION SHEETS TO LOCATE 5/16" THREADED STUDS MOUNTING HARDWARE AND THREAD STUDS (7) THRU PLATE SO THAT A MINIMUM OF 1-1/4" OF THREAD PROJECTS BEYOND THE FINISHED WALL MATERIAL.
- G-PROTECT_THREADED STUDS (7), SUPPLY (5) AND WASTE (6) ROUGHS WHILE FINISHING WALL.

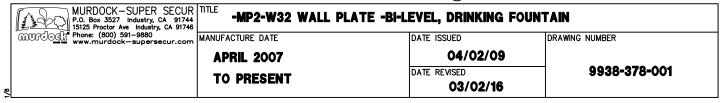

NOTE:

STANDARD BI-LEVEL INSTALLATION IS SHOWN. FOR REVERSE BI-LEVEL MF8-RBL MOUNTING FRAME AND TOP TRIM PANEL ARE OPPOSITE.

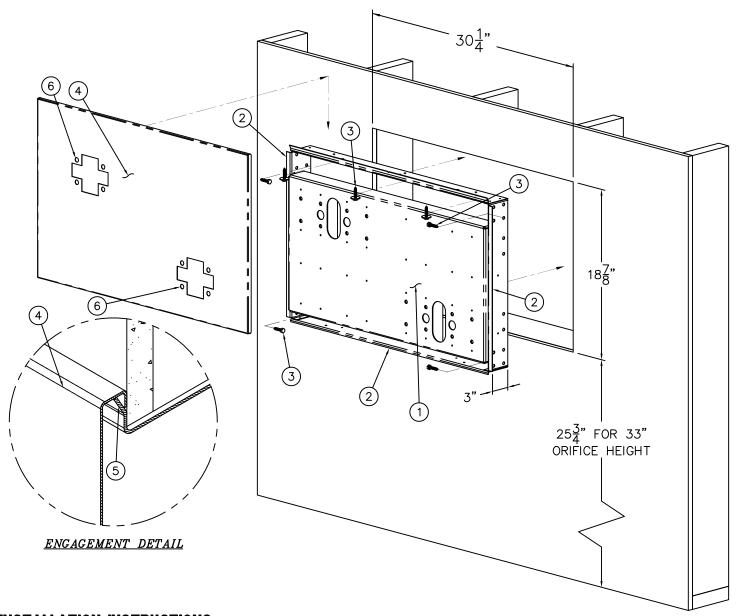


INSTALLATION INSTRUCTIONS:


- A- PROVIDE A 30-1/4" WIDE x 18-7/8" TALL OPENING AT APPROPRIATE HEIGHT. PROVIDE ADEQUATE STRUCTURAL SUPPORT AROUND INSIDE OF OPENING FOR FRAME ANCHORING.
- B- CENTER FRAME (1) WITHIN WALL OPENING. SLIDE FRAME (1) INTO OPENING UNTIL TOP, SIDE AND BOTTOM FLANGES (2) ARE AGAINST FINISHED WALL. SECURE TO WALL FROM THE TOP, SIDES AND BOTTOM USING INSTALLER PROVIDED HARDWARE (3).
- C- INSTALL TRIM PANEL (4) BY ENGAGING OVER JOGGLE (5) ON TOP OF FRAME (1), SEE ENGAGEMENT DETAIL.
- D- ASSEMBLY OF DRINKING FOUNTAINS THROUGH TRIM PANEL 4 INTO MOUNTING FRAME 1 HELPS SECURE TRIM PANEL 4 INTO ONTO WALL.

NOTE

TRIM PANEL FIXTURE MOUNTING POINTS 6 DIFFER TO MATCH MODEL REFERENCED BUT DOES NOT CHANGE THE METHOD OF INSTALLATION.

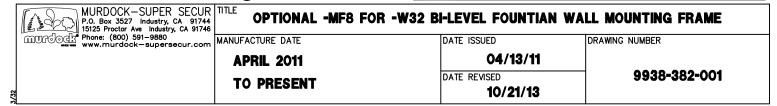



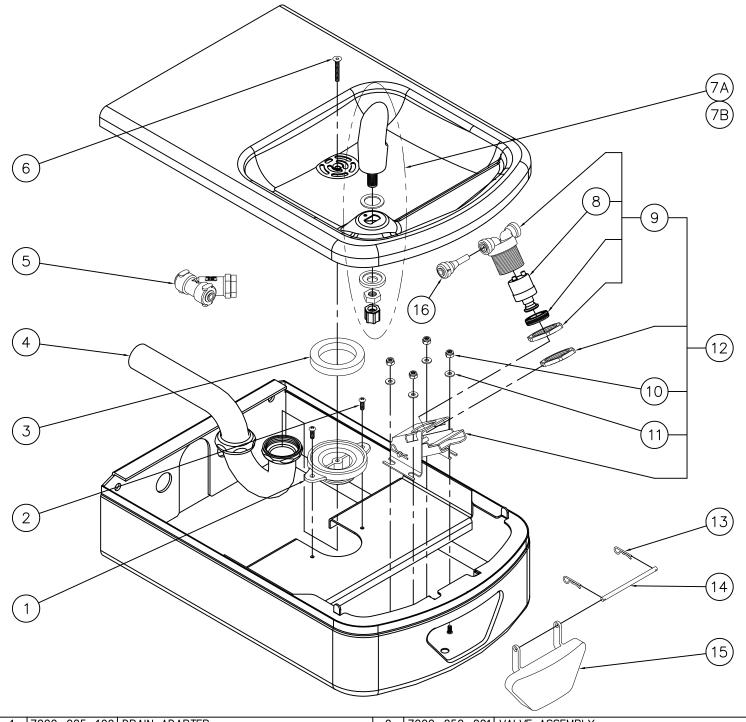

1		DRAIN ADAPTER	9	7000-050-001	VALVE ASSEMBLY		
		PHILLIPS TRUSS HEAD SCREW			NYLON INSERT LOCKNUT		
		FLAT DRAIN ADAPTER GASKET		0331-004-000			
		1-1/4" OUTER DIAMETER P-TRAP	12	7001-008-001	VALVE ACTIVATION ASSEMBLY		
			13	0341-100-000			
		ALLEN FLAT HEAD SCREW	14	7000-100-199	BLACK DELRIN SHAFT		
7A	7000-012-001	STAINLESS STEEL BUBBLER		7000-004-000			
7B	7000-099-002	FLEXIBLE BUBBLER ASSEMBLY	16	7003-093-001	FLOW RESTRICTOR (FLEXIBLE BUBBLER ONLY)		
8	7000-060-000	VALVE CARTRIDGE					
ITEM	PART NUMBER	DESCRIPTION	ITEM	PART NUMBER	DESCRIPTION		
	MUDDOOK CURED CECUR TITLE						

MURDOCK—SUPER SECUR P.O. Box 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 Phone: (800) 591–9880 www.murdock—supersecur.com MANUFACTURE DATE

PUSH PAD OPERATED 18 GAGE OVAL BOX DRINKING FOUNTAIN

JANUARY 2006 TO PRESENT

DATE ISSUED DRAWING NUMBER 10/21/05 DATE REVISED 03/03/16

9938-010-500




INSTALLATION INSTRUCTIONS

STANDARD PUSH PAD / PUSH BUTTON DRINKING FOUNTAIN

CONDITION:

SOLUTION:

NO WATER FLOW:

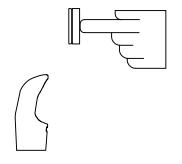

- 1.1 Check water main supply open.
- 1.2 Inspect stop (by others) open & no debris.
- 1.3 Inspect in-line strainer for debris clean.
- 1.4 Replace valve cartridge.


WATER DRIPS / WILL NOT SHUT OFF:



- 2.1 For push pad activated drinking fountains only:

 Open fixture and move valve bracket assembly further back from push pad.
- 2.2 Replace valve cartridge.

REDUCED WATER FLOW:

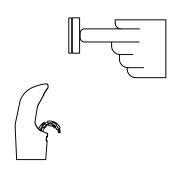

- 3.1 Adjust the valve flow rate. See appropriate fixture installation instructions.
- 3.2 Check water main supply for 20 psig minimum flow pressure.
- 3.3 Inspect stop (by others) open & no debris.
- 3.4 Inspect in-line strainer for debris clean.
- 3.5 Inspect bubbler for debris clean.
- 3.6 Inspect all tubing for twists or kinks.
- 3.7 Replace valve cartridge.

	MURDOCK-SUPER SECUR
	MURDOCK-SUPER SECUR P.O. Box 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746
L connections by	Phone: (800) 591-9880
	www.murdock-supersecur.com
1	

DRINKING FOUNTAIN VALVE MAINTENANCE INSTRUCTIONS

MANUFACTURE DATE DATE ISSUED DRAWING NUMBER

JANUARY 2006 09/28/05

TO PRESENT DATE REVISED 03/02/16

9940-200-001