


HYDRANTS

NON-FREEZE GROUND HYDRANT

3/4" (19) OR 1" (25) CONNECTIONS

FUNCTION: A Hydrant with a hinged covered box, for positive protection against freezing when buried outside or in unheated areas and the closing valve is located below the frost line. When hydrant is shut off, water is drained from the casing through the drain hole in the valve housing. The locking cover prevents unauthorized use.

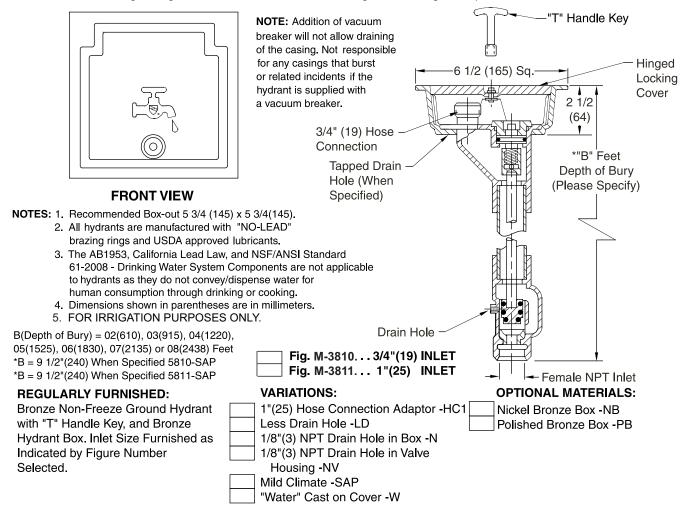

TECHNICAL DATA

Non-Freeze Ground Hydrants are supplied with a special valve housing which prevents freezing of hydrant during non-use periods. The valve housing must be installed below the frost line which prevails for the area of installation. The valve housing has a drain hole which drains the casing when the hydrant is shut off. In effect, there is no water in the casing during non-use periods. Since water from the drain hole is normally allowed to drain into the ground, the valve housing should be set in a bed of gravel. Water drained from the casing can then seep into the ground.


Some locations which require Non-Freeze Ground Hydrants cannot tolerate water draining from the drain hole. Examples are parking garages, plazas and roof decks used for recreational purposes. Often in these types of applications the valve housing will protrude into a finished area which is not subject to freezing temperatures. To eliminate the problem of water drainage in this type of installation, can supply a tapped drain hole in the hydrant box and a tapped drain hole in the valve housing. Through these tapped drain holes, water accumulation in the box and the water from the valve housing drain hole can be piped to a suitable drain.

▲ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

MURDOCK MFG. • 15125 Proctor Avenue • City of Industry, CA 91746 USA Phone 800-453-7465 or 626-333-2543 • Fax 626-855-4860 • www.murdockmfg.com


Member of MORRIS GROUP



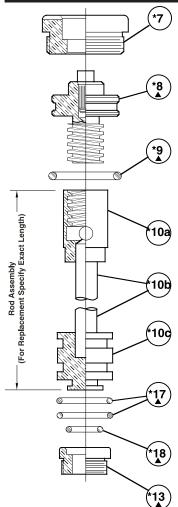

Hydrant Part List

NON-FREEZE GROUND HYDRANT

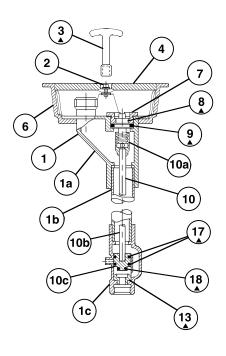

▲THESE REPLACEMENT PARTS AVAILABLE IN HPRK-41

MAINTENANCE INSTRUCTIONS

- 1. Shut off water supply.
- 2. Remove face nut.
 3. Pull stem out for complete access to all working parts.
 4. Check all working parts for replacement.
 5. Replace complete stem assembly and face nut.

 ${}^\star \text{These}$ parts are accessible from face of hydrant by removing face nut.

REPLACEMENT PARTS LIST - SPECIFY FIGURE NO. WHEN ORDERING					
No.	DESCRIPTION	No.	DESCRIPTION		
1 1a 1b 1c 2 3 4 5 6 7	Head/Casing Assembly Head Casing Valve Housing Locking Device Key Cover Hydrant Cover Hinge Pins (2) Box Face Nut	8 9 10 10a 10b 10c 13 17	Operating Screw Operating Screw "O" Ring Operating Rod Assembly Coupling Rod Plunger Removable Seat Plunger "O" Ring Plunger "O" Ring		

Murdock Mfg.™ warrants that its products are free from defects in material or workmanship under normal use and service for a period of one year from date of shipment. Murdock's liability under this warranty shall be discharged solely by replacement or repair of defective material, provided Murdock™ is notified in writing within one year from date of shipment, F.O.B. Industry, California.

UMMARY AL FOR URING	Model Number & Options	_Quantity	All dimensions are subject to manufactures tolerance of plus or minus ½" nominal and subject to change without notice. Murdock
<i>∨</i> 0 ~ –	I Company		assumes no responsibility for use of void or superseded data. Dimensions
ECTION S APPROV ANUFAC	Contact		may change with the addition of optional accessories. Murdock Mfg.™,
R AP	Signature		Member of Morris Group International™. Please visit
SELE M,	(Approval for Manufacturing)		www.murdockmfg.com for most current specifications.

MURDOCK MFG. • 15125 Proctor Avenue • City of Industry, CA 91746 USA Phone 800-453-7465 or 626-333-2543 • Fax 626-855-4860 • www.murdockmfg.com

Member of MORRIS GROUP