

INSTALLATION INSTRUCTIONS:

- A-ROUGH-IN EXISTING PLUMBING FOR THE FOLLOWING CONNECTIONS:
 - TOILET WALL WASTE OUTLET 7-1/2" GASKET WASTE (1).
 - FLUSHING INLET CONNECTION 1-1/2" NPT \bigcirc .
- B-INSTALL PRE-EXISTING 1/2"-13 ALL THREAD STUDS

 (3) INTO ANCHOR TAPPING AT REAR OF FIXTURE.


 STUDS MUST HAVE MINIMUM 1/2" ENGAGEMENT.
- C-PLACE TOILET UP AGAINST CELL WALL, SLIDING THE STUDS THROUGH WALL OPENINGS.

 NOTE: IT MAY BE NECESSARY TO SUPPORT OFF-FLOOR FIXTURES ON CELL SIDE OF WALL TO SECURE PROPERLY FROM PIPE CHASE.
- D-PLACE WASHERS AND NUTS ONTO STUDS; TIGHTEN TO 60FT/LBS.


E-FLUSH SUPPLY LINE. MAKE-UP WASTE CONNECTIONS AND MOUNT FLUSH VALVE PER MANUFACTURERS' RECOMMENDATIONS.


NOTE: FOR SUFFIX OPTION -ADA UNITS:

- 1-SEAT HEIGHT FOR -ADA BECOMES 18".
- 2-FLUSH VALVE MUST BE HYDRAULICALLY ACTUATED OR SUPPLIES WITH SPECIAL HANDLE. MAX CONTROL HEIGHT IS 36" ABOVE FINISHED FLOOR. CONTROL MUST BE LOCATED ON WIDE SIDE OF TOILET.
- 3-REFER TO -ADA ACCESSIBILITY GUIDELINES FOR COMPLETE INSTALLATION REQUIREMENTS.





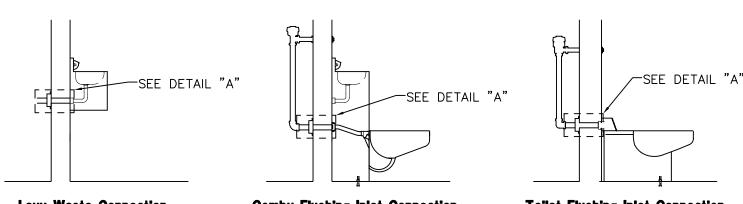

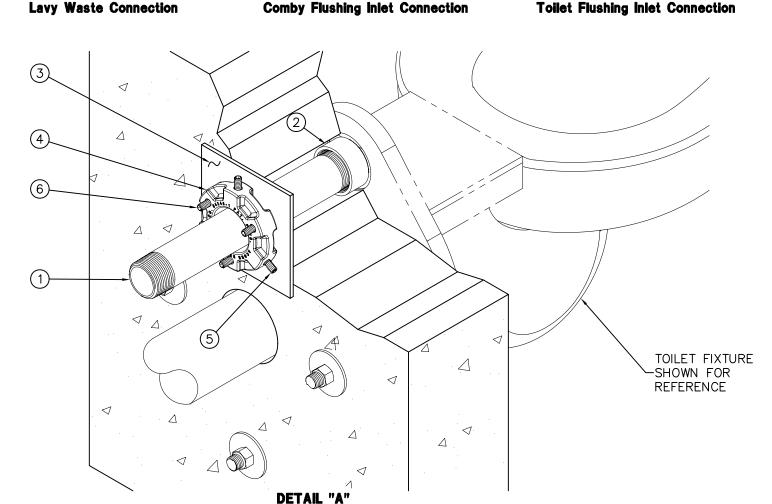

INSTALLATION INSTRUCTIONS:

- A- SECURE PIPE (1) TO FIXTURE CONNECTION (2) THROUGH WALL.
- B- PLACE THRUST PLATE (3) FLUSH AGAINST WALL.
- C- PLACE ANCHORING COLLAR (4) FLUSH AGAINST THRUST PLATE (3).
- D- HOLD UNIT AGAINST WALL, PARALLEL TO THE FLOOR.
- E- TIGHTEN SCREWS (5) (3 PLACES) TO SECURE ANCHORING COLLAR (4) TO PIPE (1).
- F- TIGHTEN SCREWS (6) (3 PLACES) TO PULL PIPE (1)
 AND PUSH AGAINST THRUST PLATE (3) IN ORDER
 TO HOLD FIXTURE WITH TENSION AGAINST WALL.

