


REFERENCE DRAWINGS:

WASTE ADAPTERS | 9985-100-002


DETAIL 'A'

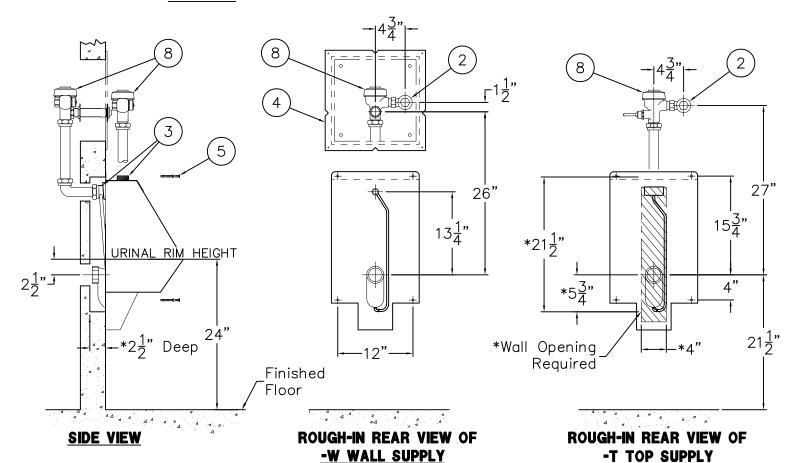


INSTALLATION INSRUCTIONS

- A-ROUGH-IN FOR THE FOLLOWING:
 - 2" WASTE OUTLET. ADAPTER FURNISHED (1) IS FOR 2" NCT X O-RING (SEE DETAIL "A"). FOR WASTE PIPING OTHER THAN 2" NCT, SEE DRAWING #9985-100-002.
 - FLUSH VALVE INLET 1" NPT (2)
 - FIXTURE FLUSHING INLET 1-1/2" NPT (3).
- B-FOR DURA-WARE FLUSH VALVE ACCESS PANELS (4), FOR CONCEALED FLUSH VALVE INSTALLATION REFER TO DRAWING #9908-399-001.
- C-INSTALL WALL ANCHORS (BY OTHERS) FOR 1/4"-20 X 2" LONG SCREWS (5).

- D-SOLDER ADAPTER (1) TO 2" NCT WASTE LINE (BY OTHERS). IF STUB-OUT (6) IS OTHER THAN 2" NCT, MAKE THE CONNECTION AS NECESSARY.
- E-LUBRICATE O-RING (7) & SLIDE ONTO ADAPTER (1).
 SLIDE FIXTURE ONTO O-RING WASTE ADAPTER (1).
 ATTACH FIXTURE TO WALL USING (4) MOUNTING
 SCREWS (5) PROVIDED.
- F- CONNECT FLUSH VALVE (8) PER MANUFACTURERS' RECOMMENDATIONS.





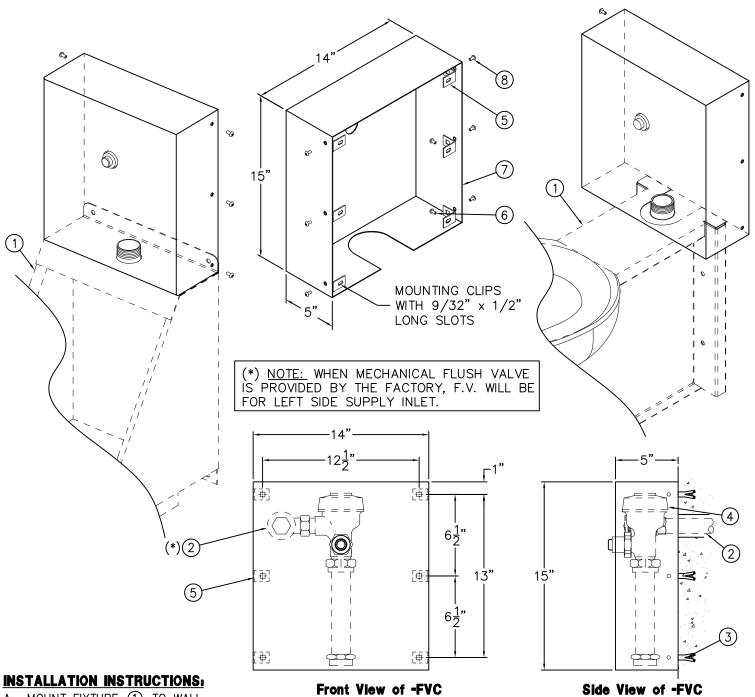

A- MOUNT FIXTURE (1) TO WALL.

B- ROUGH-IN FOR FLUSH VALVE SUPPLY (2) REFER TO FIXTURE INSTALLATION INSTRUCTIONS.

- C- LOCATE AND INSTALL WALL ANCHORS (BY OTHERS) (3).
- D- INSTALL FLUSH VALVE 4 TO FIXTURE 1.
 E- ATTACH MOUNTING CLIPS 5 TO WALL USING MOUNTING SCREWS 6 (BY OTHERS).
- F- ATTACH FLUSH VALVE COVER (7) TO MOUNTING CLIPS (5) USING #10-32 SCREWS (8) PROVIDED.

| Reference | Drawings | |
|-----------------|--------------|--|
| Security Screws | 9951-005-001 | |
| Tinnerman Nuts | 9951-007-001 | |

NOTE: FIXTURES SHOWN FOR REFERENCE ONLY.

| ACORN ENGINEERING COMPANY P.O. BOX 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 (626) 336-4561 FAX (626) 961-2200 | -FVG FLUSH VALVE GOVEK \$2802 | | |
|--|-------------------------------|-------------------------|----------------|
| | MANUFACTURE DATE | DATE ISSUED | DRAWING NUMBER |
| | FEBUARY 1975 | 04/17/98 | |
| 8/ | TO PRESENT | DATE REVISED 12/21/16 D | 9908-395-001 |

6

6

LONG SLOTS

Ф

ф.

ΕΦ.

12⁻]'


15**"**

8

(2)

(5)

ф

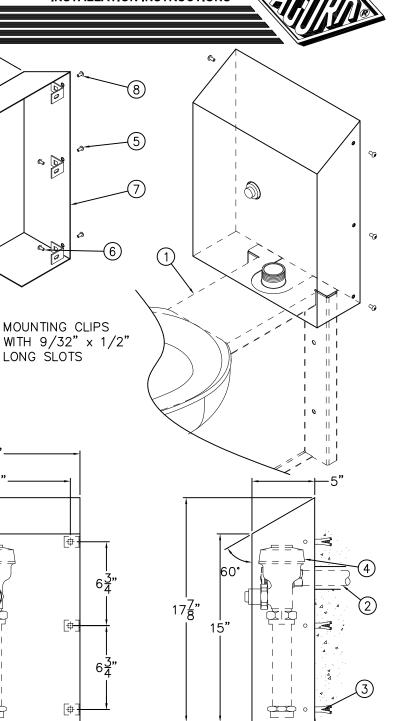

INSTALLATION INSTRUCTIONS:

A- MOUNT FIXTURE (1) TO WALL. B- ROUGH-IN FOR FLUSH VALVE SUPPLY (2) REFER

TO FIXTURE INSTALLATION INSTRUCTIONS. C- LOCATE AND INSTALL WALL ANCHORS (BY OTHERS) (3).

D- INSTALL FLUSH VALVE 4 TO FIXTURE 1.
E- ATTACH MOUNTING CLIPS 5 TO WALL USING MOUNTING SCREWS 6 (BY OTHERS).

F- ATTACH FLUSH VALVE COVER (7) TO MOUNTING CLIPS (5) USING #10-32 SCREWS (8) PROVIDED.

| Reference Drawings | | |
|--------------------|--------------|--|
| Security Screws | 9951-005-001 | |
| Tinnerman Nuts | 9951-007-001 | |

Side View of -FVC-SLPT

NOTE: FIXTURES SHOWN FOR REFERENCE ONLY.

| | ACORN ENGINEERING COMPANY P.O. BOX 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 (626) 336-4561 FAX (626) 961-2200 | -FVC-SLPT FLUSH VALVE COVER WITH SLOPING TOP #2802 | | | |
|-----|--|--|-------------------------|----------------|--|
| | | MANUFACTURE DATE | DATE ISSUED | DRAWING NUMBER | |
| | | FEBUARY 1975 | 03/07/11 | | |
| 1/8 | | TO PRESENT | DATE REVISED 04/15/13 E | 9908-397-001 | |

Front View of -FVC-SLPT